

The "ClearOption" Show Caps

to replace and cover the trim screws on your C6 Corvette®

Installation Instructions

Each Show Cap kit includes the following....

- *40 Show Caps and Mounting Cups (recommended for use along front fenders, door jambs and hatch/trunk lid)*
- *36 #8 Stainless Steel Screws (recommended for use around front fenders, door jambs and hatch/trunk lid)*
- *4 #6 Stainless Steel Screws (recommended for use along the 2 sides of the back hatch)*
- *40 Stainless Steel Washers*


You are receiving enough Show Caps and stainless steel hardware to handle your C6.

Replace as many... or as few as you would like. That is your choice.

Depending on the location, choose the best diameter screw as indicated in the recommended list above.

Regardless of installation point, assemble hardware as shown in the graphic with the stainless washer below the mounting cup. This washer will allow added stability on the elongated mounting holes to not distort the mounting cup during installation.

DO NOT OVER-TIGHTEN.

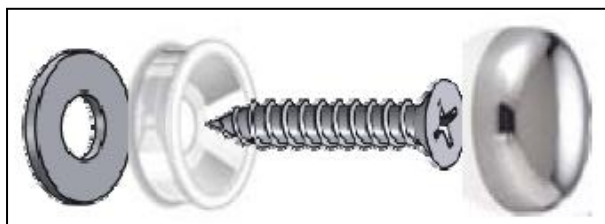

Only replace one torx trim screw at a time to avoid any body panel misalignment.

*When installing any new stainless screw- if you encounter any excess resistance, **DO NOT FORCE.***

Once the stainless washer, plastic mounting cup and stainless screw are installed, the Show Cap should easily snap in place with a distinctive "click".

Feel free to send any comments along with before/after pictures to feedback@theclearoption.com.

www.theclearoption.com